

Installation Guide

SanCo

Common-rail



Tuning Module

CITROËN / PEUGEOT

fits 2.0 and 2.2 L HDI


Installation

1. Switch off the engine and remove the motor shield. Note the location of the Common-rail plug (red) and disassemble the connector.

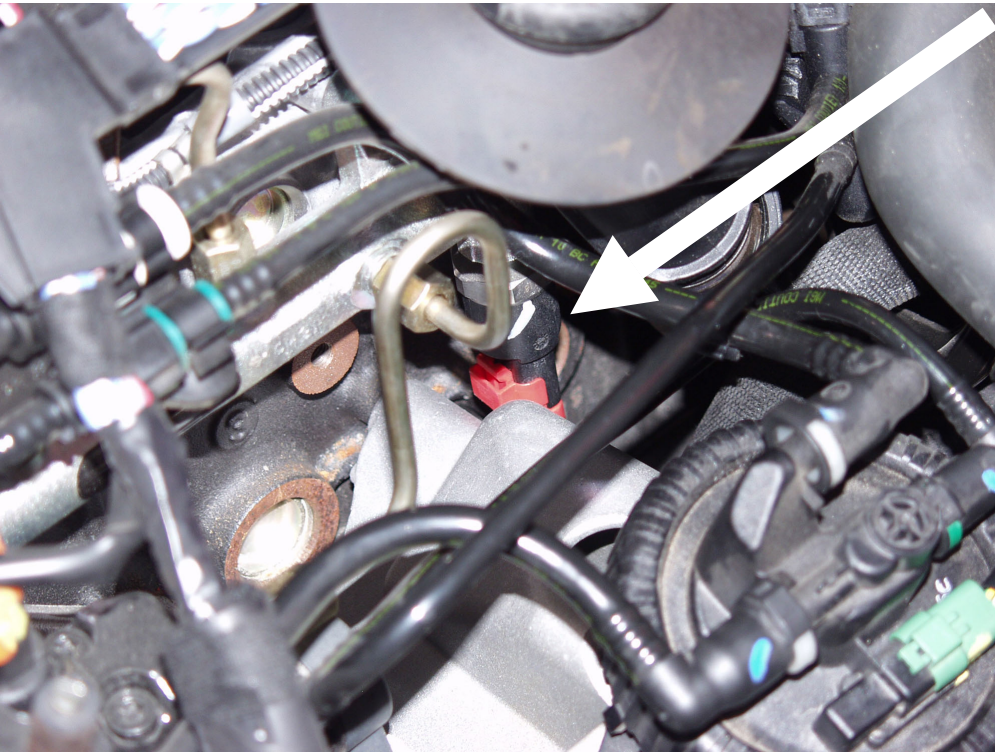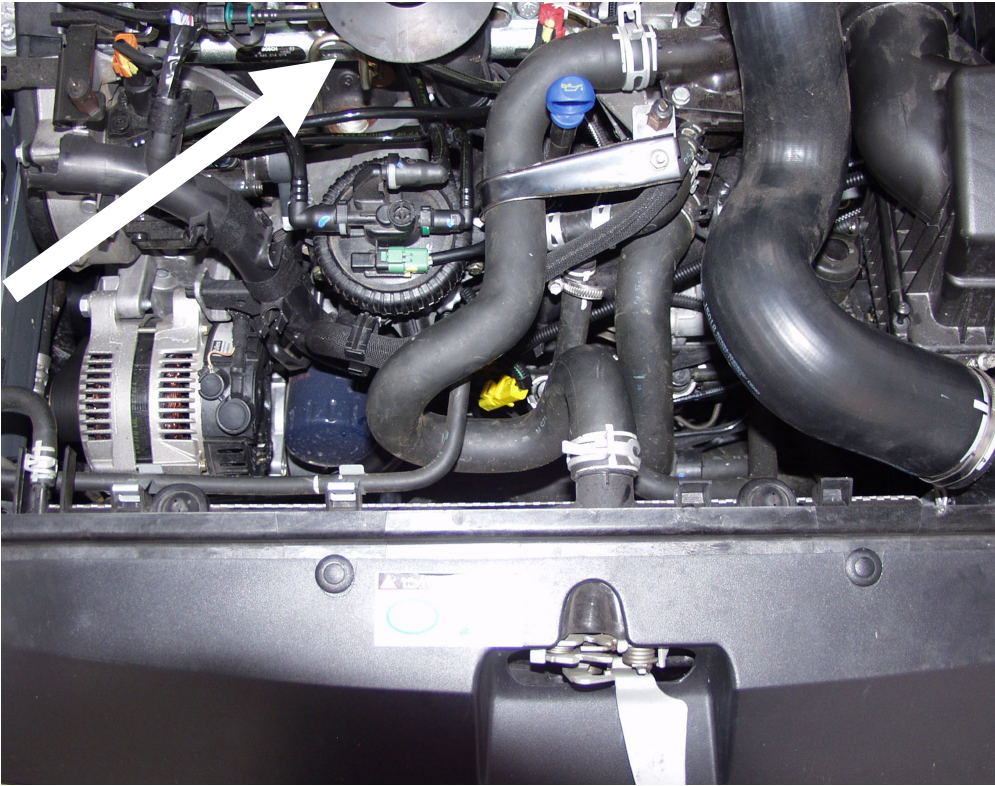

2. Insert the enclosed cable set between the two disassembled connectors.

NB !!! If the enclosed cable set does not fit you must remove the middle part of the Common-rail plug by means of a sharp knife (see below).

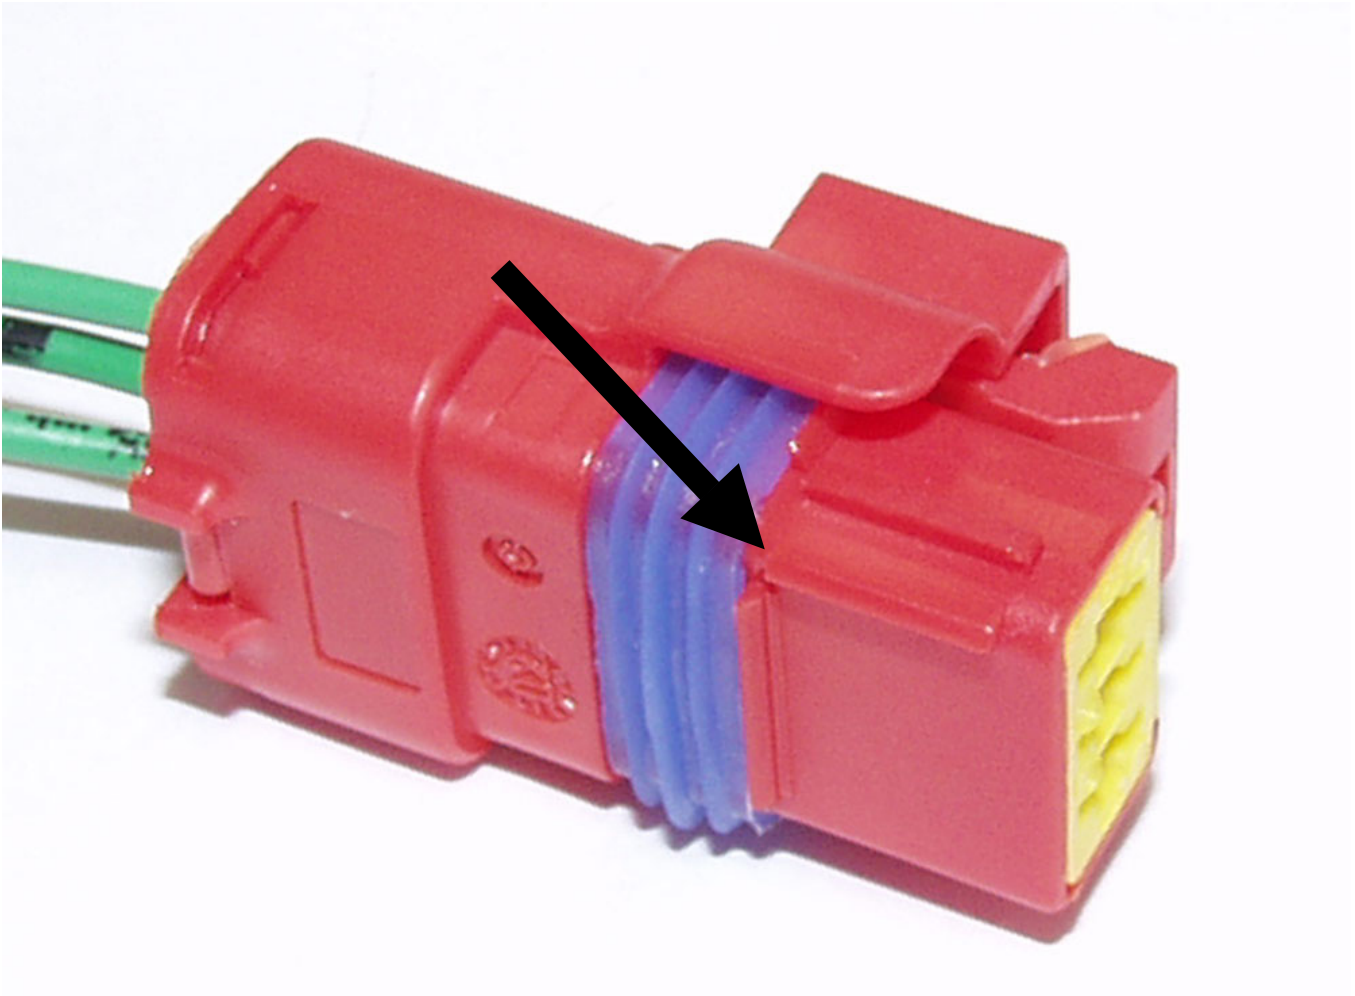

3. Connect the Common-rail module to the 15-pin plug of the cable set.

4. Install the module not too close to the engine. Please observe water and vibration risks!!

5. Check once again that all connections are placed correctly. Finally, remount all removed shields. The Common-rail module is now ready for use.

Have fun with your new SanCo-module in your daily driving !